

Connector Kit for Party Tents

Joins two party tents into one closed space



Two tents joined together

The kit joins two BRIMO party tents placed end to end. The double foot plates hold the legs of both tents together, and the white PVC strip covers the joint on the roof and the sides – waterproof and draught-free.

Widths	4 m · 5 m · 6 m
Strip	PVC fabric 500 g/m ² , white, up to 33 cm wide
Metal parts	steel, white powder coating
Compatibility	BRIMO party tents (legs Ø 38 mm, side height up to 210 cm)

Package contents

- 1 connecting strip (D) with ropes
- 2 double foot plates (A)
- 4 connecting tubes (B)
- 4 bolts (C) with nuts
- 2 wrenches (E)
- 4 S-hooks (G)
- 4 plastic clips
- 1 printed instruction

Installation and use

- 1 Place the tents**
Set up both tents end to end so that the legs on the joining side stand next to each other.
- 2 Insert the legs**
Lift the legs on the joining side and put the legs of both tents into a double foot plate (A). Make sure they sit firmly in the holes.
- 3 Fix the frame**
Align a connecting tube (B) with the leg. Push a bolt (C) through the tube, the foot plate and the tent leg, fit the nut and tighten it with the wrenches (E). Repeat at the front and back.
- 4 Lay the strip**
Lay the connecting strip (D) over both roofs so that it covers the gap along the whole length and hangs down on both sides.

5

Tension

Thread the ropes at the bottom of the strip through the clips. Hook one end of an S-hook (G) into the clip and the other end into a hole of tube (B), and pull the strip tight.

Note: Designed for BRIMO party tents. Compatibility with other brands is not guaranteed.



Double foot plate (A) with tubes (B)



Kit contents

Safety instructions

For this product

- Each tent must be anchored separately along its full length. The connection does not replace anchoring.
- Take the tents down in strong wind, storm or snow. Remove any water collecting on the strip or the roofs immediately.
- Lifting the legs needs at least two persons. Wear gloves and watch your fingers.
- Check the bolts and the strip tension regularly during use.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Clean the strip with water and let it dry before packing.
- Store the small parts together in a bag so nothing gets lost.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.